


Instructions for CWT Integrator Module Fuse Replacement

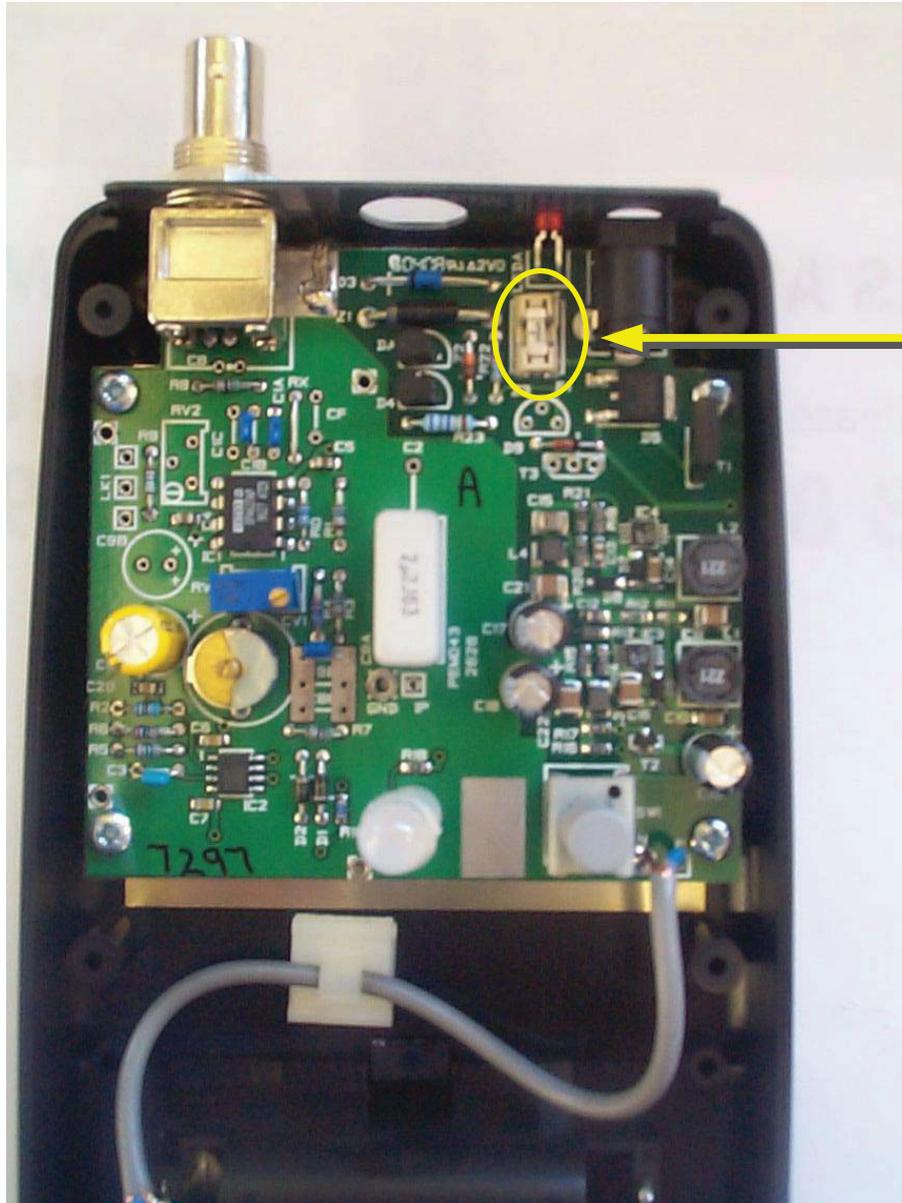

Fuse

- To change the fuse simply open the box
- Make sure the unit is off, the external power is removed and the coil is disconnected from the circuit under test
- Remove the lid
- Pull the fuse out
- Replace fuse with D451 SMD quick blow fuse:
CWT Standard, CWT Mini: 250mA fuse
CWT Ultramini: 500mA fuse