

How to modify a DSSIU-6 from a voltage version to a current output version.

Please follow below steps.

1. Remove mains cable to ensure the units is unpowered
2. Remove lid by first removing all screws in lid
3. On each channel were the output should be changed from voltage out to current out, the corresponding jumpers should be moved.
4. Example in the below picture is to move the jumpers for channel 2 (Red arrow direction), from the U setting to the I setting. (CH2+ and CH2- on J3 and J4)



5. Remove the fuse from channel 2 ("CH2 FUSE"), to ensure that no small leakage current can run in the wrong path
6. Repeat this action for all other channels and the DSSIU is converted to a current output
7. Place lid and screws and the procedure is finished