



GMW

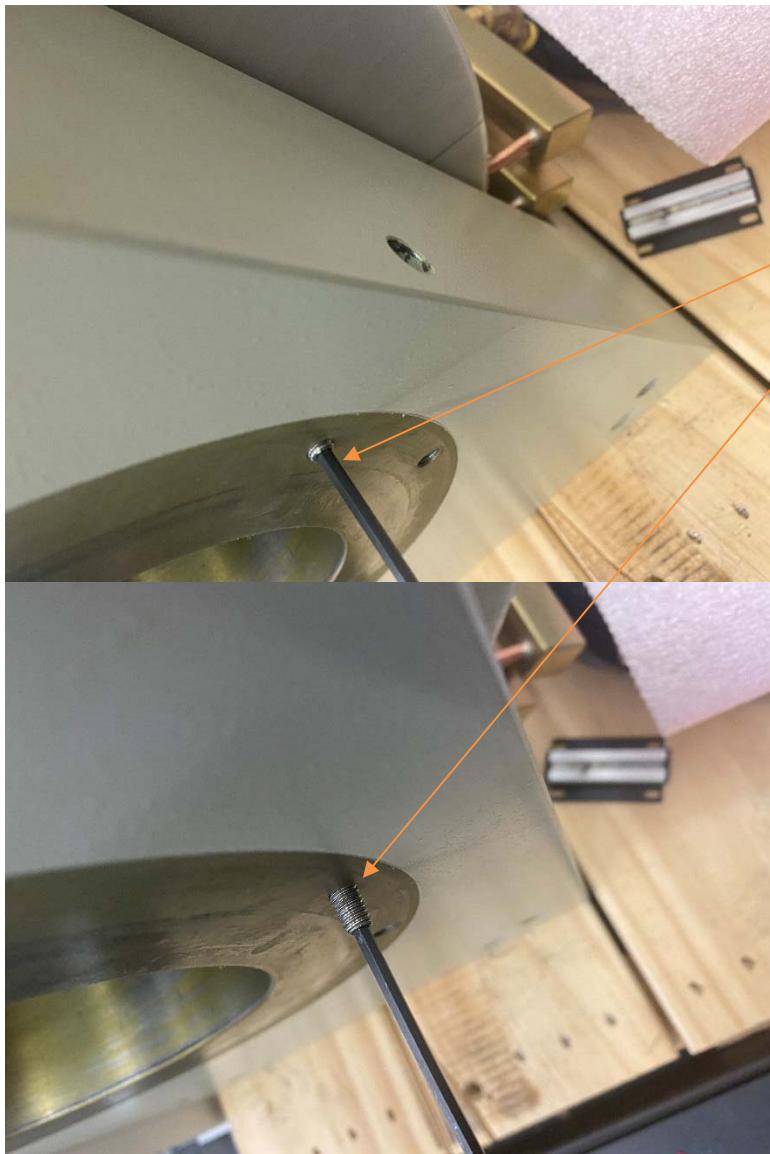


The side retaining ring must be removed prior to removing the set screw shown. Use an M3 allen wrench to remove the set screw.

GMW

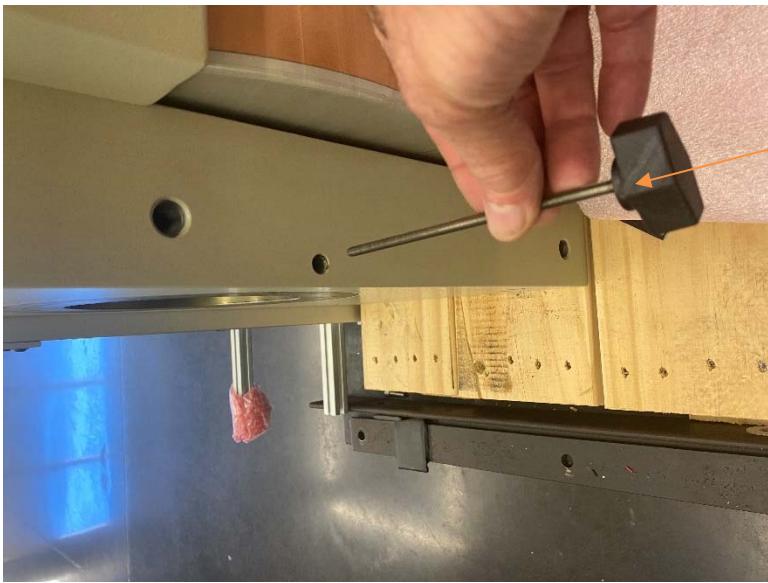


Once the set screw is removed use the tool provided with the new poles to pull the hard stop pin.

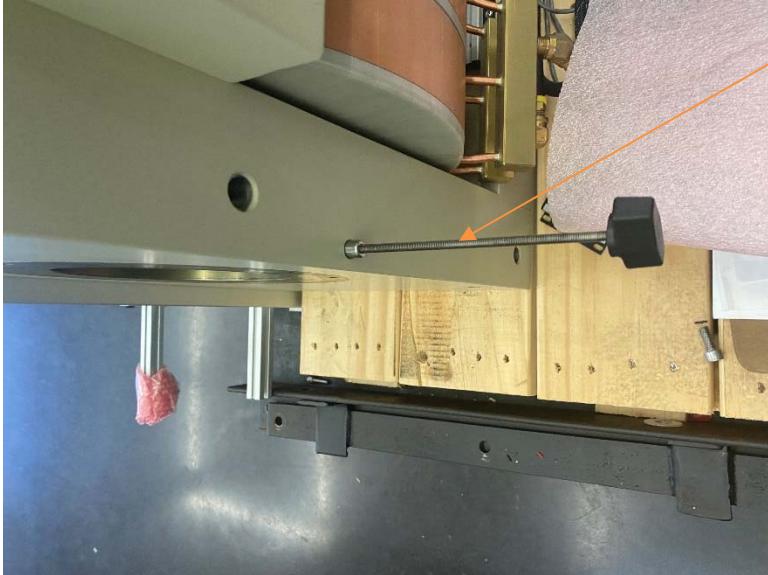

Screw the tool in to the pin and pull it straight out as shown.

GMW

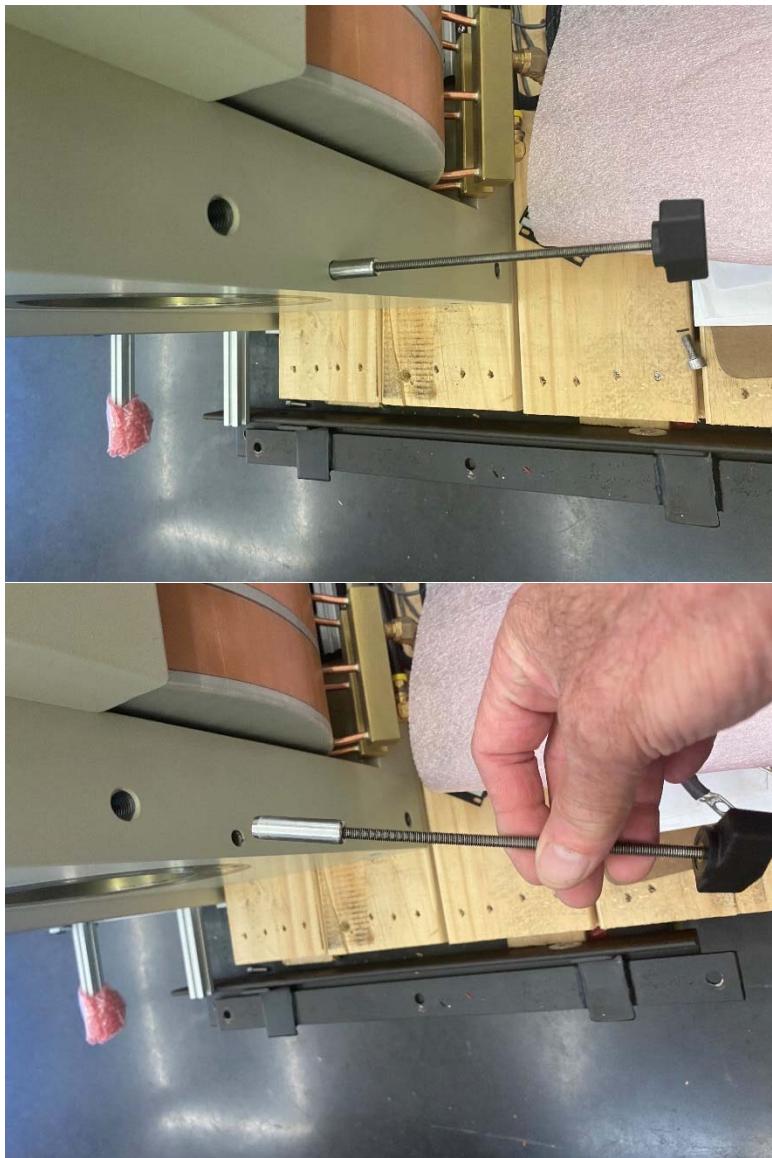

GMW Associates • 955 Industrial Road • San Carlos, CA 94070 • USA
Tel +1 (650) 802-8292 • Fax +1 (650) 802-8298 • sales@gmw.com • www.gmw.com